

Use and Maintenance Manual



Oil Mist Separator **MISTOL DUST-2000**

Manufacturer:

KLIMAWENT S.A.

81-571 Gdynia; ul. Chwaszczyńska 194

phone 58 629 64 80; 58 771 43 40

e-mail: klimawent@klimawent.com.pl

www.klimawent.com.pl

800S14 MISTOL DUST-2000 23.10.2019/EN

Contents:

| | | |
|-----|---|---|
| 1. | Introductory Remarks | 2 |
| 2. | Application..... | 2 |
| 3. | Reservations of Producer | 2 |
| 4. | Technical Data..... | 3 |
| 5. | Structure and Function | 3 |
| 6. | Assembly and Start-up | 5 |
| 7. | Operational Use..... | 5 |
| 8. | Troubleshooting Guide | 6 |
| 9. | Maintenance | 7 |
| 10. | Occupational Health and Safety | 7 |
| 11. | Transport and Storage..... | 7 |
| 12. | Terms of warranty | 7 |
| 13. | Sample of the Declaration of Conformity | 8 |

1. Introductory Remarks

The purpose of the present Use and Maintenance Manual is to supply User with directions within the range of application, installation, start-up and the use of the **MISTOL-DUST-2000 oil mist separator**.

Installing, start up and operational use are exclusively admissible after getting acquainted with the contents of the Use and Maintenance Manual.

With regard to continuity of work carried on improvement of our products, we reserve for ourselves the revision possibility of the draft and technological changes improving their functional features and safety.

Construction of the **MISTOL-DUST-2000** oil mist separator meets the requirements of the current state technology as well as the safety and health assurances included in:

- **2006/42/EC Machinery Directive** of the European Parliament and of the Council of May 17th, 2006 on machinery – amending the 95/16/EC (recast) /*Journal of Laws EC L157 of 09.06.2006, page 24/*
- **2014/35/EC Directive** of the European Parliament and of the Council of 26 February, 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits. /*Journal of Laws EC L96 of 29.03.2014/*

The appliance meets the requirements included in:

- **2009/125/EC (ErP) Directive** of the European Parliament and of the Council of October 21th, 2009 establishing a framework for the setting of ecodesign requirements for energy-related products / *Journal of Laws L 285 of 31.10.2009 /*
- **327/2011 (EU) Regulation** of March 30th, 2011 on implementing the **2009/125/EC Directive** of the European Parliament and of the Council with regard to ecodesign requirements for fans driven by motors with an electric input power between 125W and 500 kW / *Journal of Laws L No. 90 of 06.04.2011 /*

Additionally, the appliance meets following harmonized standard:

- | | |
|-----------------------------------|--|
| ● EN ISO-12100:2012 | – “Safety of machinery – Basic concepts, general principles for design. Risk assessment and risk reduction” |
| ● EN 60204-1:2018-12 | – “Safety of machinery – Electrical equipment of machines Part 1: General requirements” |
| ● EN ISO 13857:2010 | – “Safety of machinery – Safe distances to prevent hazard zones from being reached by upper and lower limbs” |
| ● EN 60529:2003/A2:2014-07 | – “Degrees of protection provided by enclosures (IP Code)” |
| ● EN 61439-1:2011 | – “Low-voltage switchgear and controlgear assemblies Part 1: General resolutions” |

2. Application

MISTOL DUST-2000 Oil Mist Separators are designed for cleaning the air of oil mist, contaminated with dust, arising during various production processes. Particularly, they are applied for extraction of oil particles from vapours of cooling-lubricant liquids used in machining (i.e. grinding, milling, etc.).

3. Reservations of Producer

- A. Manufacturer accepts no liability for any consequences following from the operational use that is in contradiction to the purpose of application.
- B. Installing of any additional elements that are not belonging to the normal device structure (or accessory set) is not acceptable.
- C. Do not introduce any structural or constructional modifications on the device on one's own.
- D. Protect device housing from mechanical damage.
- E. Prior to installing, check the load-carrying capacity of the building structure where the appliance shall be placed.
- F. The device is inappropriate for conveying the air containing mixture of flammable substances in a form of gases, vapours and mists, that (in contact the air) create explosive mixtures.

G. Do not use the Oil Mist Separator for cleaning the air polluted with aggressive substances which could exert destructive effect on the device.

4. Technical Data

Table No.1

| Type | Maximum volume flow [m ³ /h] | Maximum vacuum [Pa] | Supply voltage / frequency [V/Hz] | Motor rate [kW] | Acoustic pressure level | | Weight [kg] |
|-------------------------|--|------------------------|--------------------------------------|--------------------|-------------------------|----|----------------|
| | | | | | 1m | 5m | |
| | | | | | [dB(A)] | | |
| MISTOL DUST-2000 | 2850 | 2050 | 230 / 50 | 1,5 | 72 | 66 | 134 |

CAUTION: ingress protection IP44

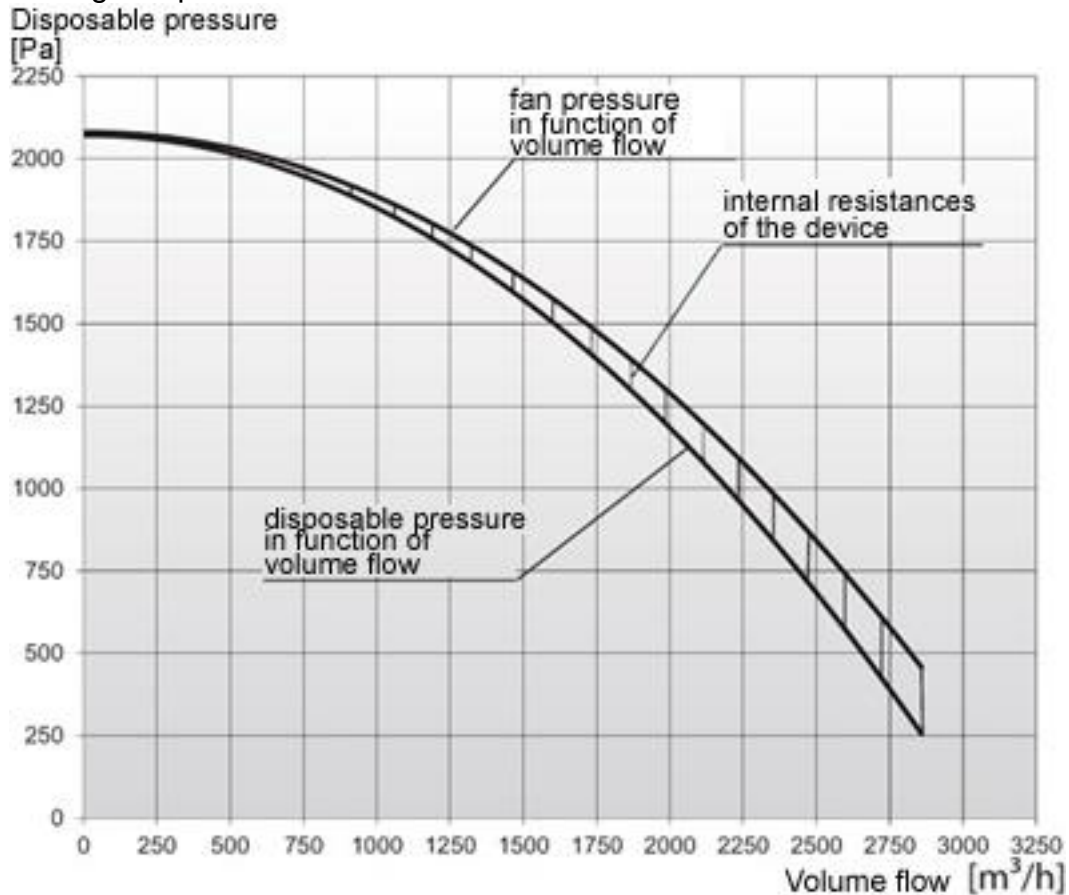
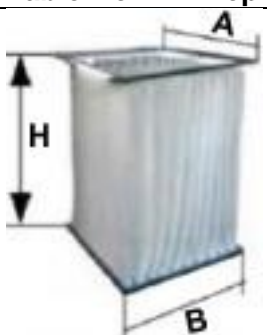


Fig. No.1 – MISTOL DUST-2000 – Flow chart

Table No.2 – Replaceable filter

|  | Type | Weight [kg] | Dimensions A x B x H [mm] | Quantity | Class | Filtration material |
|---|------|---------------------|------------------------------|-------------|-------|---------------------|
| | | FK-MISTOL DUST-2000 | 5,7 | 610x610x850 | 1 | F8 |

5. Structure and Function

MISTOL DUST-2000 oil mist separator consists of subsequent elements

- steel housing,
- radial fan – housing and impeller of cast aluminium
- pre-filter – net filter,

- pocket-filter – class F8,
- sedimentation chamber (for oil droppings),
- decompression chamber with a screen,
- pressure control (pressostat) – signalling for excessive flow resistances of the pocket-filter,
- control unit,
- oil drainage valve,
- supporting structure,
- silencer at the fan outlet.

As a first stage, the polluted air is drawn into the decompression chamber, where the largest oil drops are captured on the screen. Subsequently (as a second stage) the air stream passes through the net filter into the pocket-filter. The pocket-filter is made of nonwoven that is resistant to oil pollution (fatty contamination). The separated oil drops into the sedimentation chamber. Underneath the sedimentation chamber is installed an oil drainage valve to empty the sedimentation chamber from the accumulated oil (into the container/bucket placed underneath the device). On the device is installed a control unit in a plastic case.

The device is equipped with a S1 isolating switch (Fig. No.4).

Pressure control (pressostat) with setting 500Pa indicates the contamination of the pocket filter (the red lamp H3 is activated – Fig. No.4).

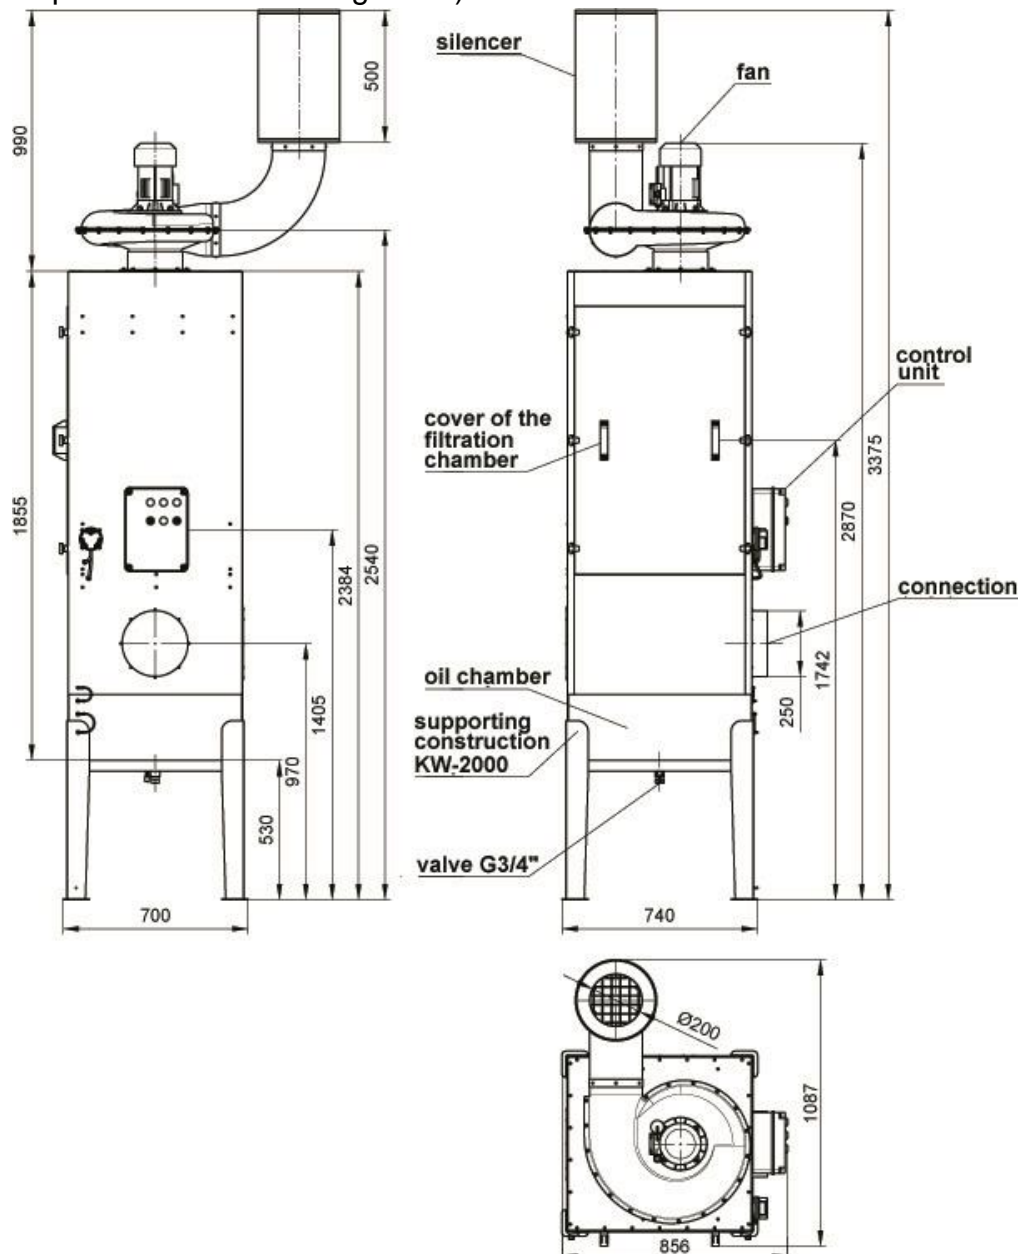


Fig. No.2 – MISTOL DUST-2000 – Structure and dimensions

The appliance cannot work continuously day and night, as there is not enough time for the excessive oil to drip down into the sedimentation chamber.

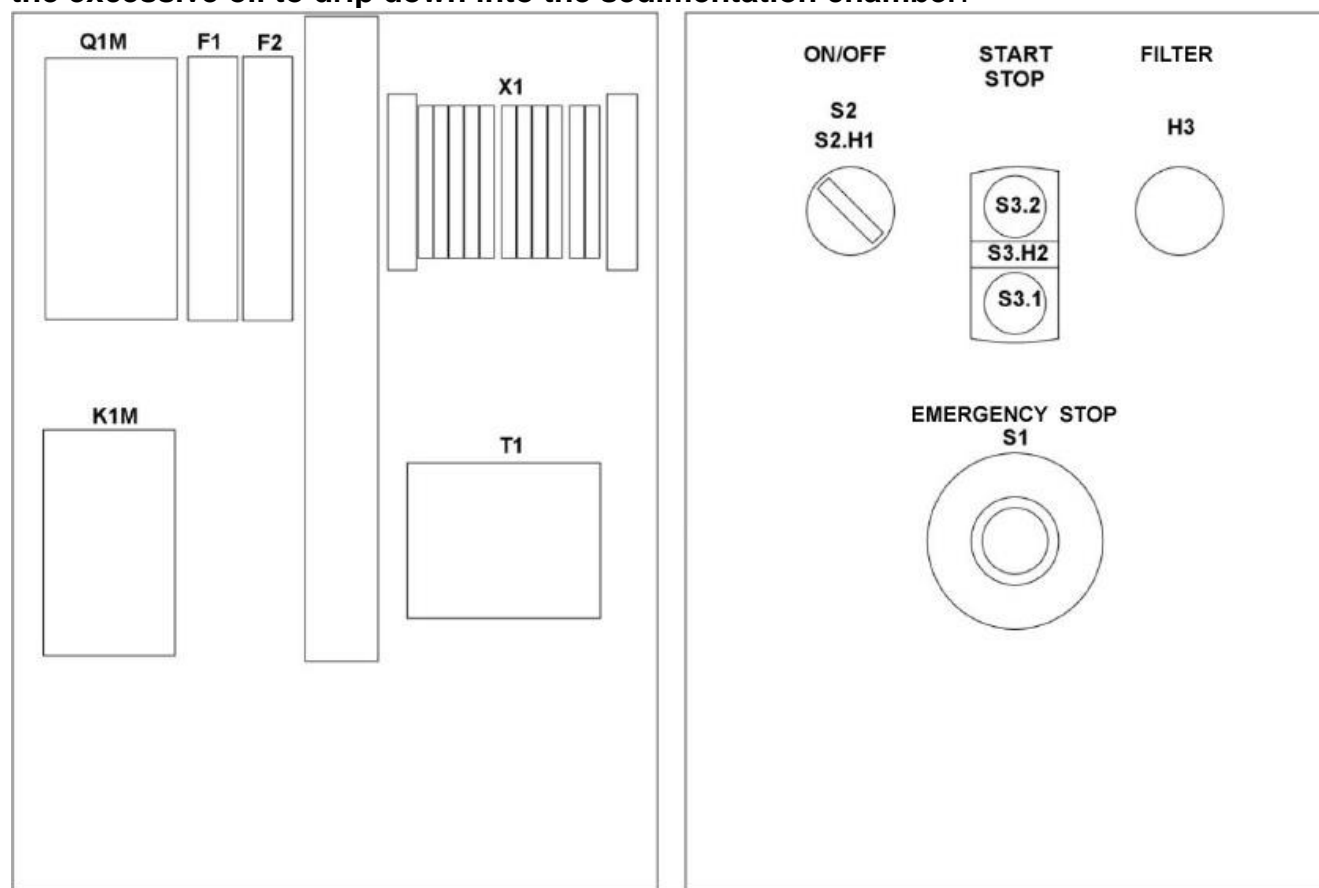


Fig. No.4 – MISTOL DUST-2000 – control unit

MISTOL DUST-2000 is operated by the control unit (see Fig. No.4). To switch ON and OFF, use the motor protective switch **Q1M**, protecting the motor from damage of overload, short-circuit. The illuminated switch with highlighted **S2** (ON/OFF) applies voltage to the control system, which is indicated by the **S2.H1** lamp (illuminated switch). The button **S3.2** (START) operates the fan – this is indicated by the green **S3.H2** lamp. To switch off the fan, press the **S3.1** (STOP) lamp – the **S3.H2** lamp goes off.

The **S1** “**EMERGENCY STOP**” button disconnects the control circuit, and the fan is switched off in case of a sudden necessity when the device work needs to be interrupted.

Differential pressure control (pressostat) with its setting 500 Pa indicates the pollution state of the filters. The red **H3** lamp signals the filter contamination. In this case, it is important to clean the pre-filter and replace the pocket filter.

8. Troubleshooting Guide

Table No.3

| | Problem | Possible reason | Corrective action |
|----|---|---|--|
| 1. | The intake air volume decreases gradually | The pocket filter is polluted; the pressure control (pressostat) is damaged or polluted | Replace the pocket filter or the pressure control (pressostat); unplug/clean the flexible PVC hoses connecting the pressure control with the pressure measurement points |
| 2. | Sudden vibrations of the device are occur | Failure of the impeller | Replace the impeller with the motor for new |
| 3. | The fan do not switch on | Protection Q1M, F1, F2 are switched off. | Check the reasons, why the protections got activated. Switch on the mentioned protections |

9. Maintenance

The construction does not require continuous routine maintenance, except revisions of the mechanical and electrical connections, **especially the grounding and the protective cable (every several years)**. After one year of operational use, the fan ought to be thoroughly cleaned and examined. Fix eventual failures / malfunctions.

10. Occupational Health and Safety

The Oil Mist Separator can exclusively be operated after getting acquainted with the contents of the present Use and Maintenance Manual. The appliance shall not cause any risk, provided that it is correctly installed – according to the present Use and Maintenance Manual. The appliance meets the requirements of the 2006/42/EC Directive and do not require additional protections for a safe operational use.

WARNING Repair / technical revision has to be carried out after the device is disconnected from the power supply system. Additionally, activities pertaining to the electrical wiring system ought to be performed by an authorised person with qualifications.

11. Transport and Storage

The device ought to be transported on a pallet in foil. During the transport, it is important to protect the device from damages, uncontrolled slide (displacement), indentations and from atmospheric factors. Store the Oil Mist Separator in a dry rooms and in areas of efficient ventilation.

12. Terms of warranty

The period of warranty for the purchased device is indicated in the “Card of Warranty”. The warranty does not comprise:

- mechanical damage and malfunctions caused by User,
- device failures caused during the use which is in contradiction with the purpose of application and with the present Use and Maintenance Manual,
- malfunctions resulting from the improper transport, storage or incorrect maintenance.

Infringement of the Section 3 “Reservations of Producer” of the present Use and Maintenance Manual and, especially modifications undertaken by User on one’s own or use in contradiction with the purpose of application – shall result in the loss of warranty validity.

13. Sample of the Declaration of Conformity

Declaration of conformity EC No.

Manufacturer (eventually the authorized representative / importer):

name: **KLIMAWENT S.A.**

address: **81-571 Gdynia, Chwaszczyńska 194**

A person, authorized for issuing the technical documentation: Teodor Świrbutowicz, KLIMAWENT S.A. hereby declares that the appliance:

name: **oil mist separator**

type/model: **MISTOL DUST-2000**

serial number: year of production:

meets the requirements of the subsequent European Directives:

– **2006/42/EC Machinery Directive** of the European Parliament and of the Council of May 17th, 2006 on machinery – amending the 95/16/EC (recast) /*Journal of Laws EC L157 of 09.06.2006, page 24*/

– **2014/35/EC Directive** of the European Parliament and of the Council of 26 February, 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits. /*Journal of Laws EC L96 of 29.03.2014*/

The appliance meets the requirements included in:

– **2009/125/EC (ErP) Directive** of the European Parliament and of the Council of October 21th, 2009 establishing a framework for the setting of ecodesign requirements for energy-related products /*Journal of Laws L 285 of 31.10.2009*/

– **327/2011 (EU) Guideline** of March 30th, 2011 on implementing the **2009/125/EC Directive** of the European Parliament and of the Council with regard to ecodesign requirements for fans driven by motors with an electric input power between 125W and 500 kW /*Journal of Laws L No. 90 of 06.04.2011*/

The appliance meets following harmonized standard:

- **EN ISO-12100:2012** – “Safety of machinery – Basic concepts, general principles for design. Risk assessment and risk reduction”
- **EN 60204-1:2018-12** – “Safety of machinery – Electrical equipment of machines Part 1: General requirements”
- **EN ISO 13857:2010** – “Safety of machinery – Safe distances to prevent hazard zones from being reached by upper and lower limbs”
- **EN 60529:2003/A2:2014-07** – “Degrees of protection provided by enclosures (IP Code)”
- **EN 61439-1:2011** – “Low-voltage switchgear and controlgear assemblies Part 1: General resolutions”

.....
place, date

.....
signature of authorised person

.....
name, surname, function
of the signatory

KLIMAWENT S.A.
Supported Employment Enterprise
81-571 Gdynia, ul. Chwaszczyńska 194
phone: +49 58 829 64 80
email: klimawent@klimawent.com.pl
www.klimawent.com.pl

District Court Gdańsk-Północ
in Gdańsk, VII Wydział Gospodarczy
of the National Register of Court
KRS 0000308902 company stock
13.779.200 zł paid in total

NIP: 958 159 21 35
REGON: 220631262
Bank Account: **Santander Bank Polska S.A.**
56 1500 1025 1210 2007 8845 0000